

## Instruction of Three Channels External Receiver

### 1. Connect the wire (Fig.1)

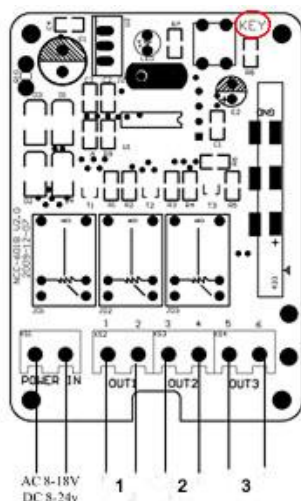


Fig.1

### 2. Learn the transmitter

- Open the cover, press "KEY" button for 1 second, the red flash light flashes, it's now to learn the transmitter,
- Press one button of transmitter twice, the red flash light flashes and turns off, this means successfully learnt of transmitter,
- Follow the step 1 and 2 to learn other transmitters, max. 30 transmitters can be learnt.

### 3. How to use

Transmitter as Fig.2

The three output relays of external receiver(1,2,3) are separately according to the ①, ② and ③ button of the transmitter, the ④ button is of no use.

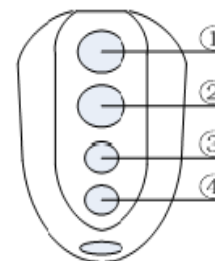


Fig.2

### 4. Technical Data

<b>Input voltage</b>	AC8~18V or DC8~28V
<b>Static power</b>	≤1W
<b>Channels</b>	3 channels
<b>Transmitter working voltage</b>	DC12V (by battery)
<b>Transmitter consumption</b>	working current≤15mA
<b>Transmitter frequency</b>	433MHz
<b>Max. control distance</b>	100m
<b>Working temperature</b>	-20°C~+55°C