


Instruction Manual of Infrared Sensor

1. **Connect the Infrared Sensor to the terminal on the motor head**

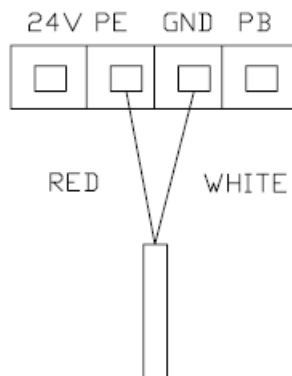

2. **Set the function of Infrared Sensor on the LED board**

How to activate the Infrared Sensor function:

Press SET button and hold on 3 seconds until the LED flashes "1".

Press "UP" or "DOWN" button until the LED flashes "3", press "SET" button. It's now under Infrared Sensor setting mode. The LED displays the current setting.

Press "UP" button, the LED displays "1", the Infrared Sensor function is available.

Press "SET" button to confirm.

How to cancel the Infrared Sensor function:

Press SET button and hold on 3 seconds until the LED flashes "1".

Press "UP" or "DOWN" button until the LED flashes "3", press "SET" button. It's now under Infrared Sensor setting mode. The LED displays the current setting.

Press "DOWN" button, the LED displays "0", the Infrared Sensor function is cancelled.

Press "SET" button to confirm.

Disconnect the wire of the Infrared Sensor .

